

Backup ups rs 1500 on battery solid yellow light

How to troubleshoot APC back ups Rs 1500?

Ensure the Back-UPS is securely connected to an AC outlet. (default settings) 1. Consult the Troubleshooting section to User manual for the device APC Back UPS RS 1500. Online user manual database

How do I know if my ups has a battery?

1. The green On Line indicator will flash. 2. The yellow On Battery indicator will light while the battery test is performed. If the UPS passes the Self-Test, the green On Line indicator will be lit and solid. If it fails the test, the red Replace Battery indicator will be lit as well as the green On Line LED.

What does it mean when a back-ups ups flashes on-line & overload LEDs?

When a Back-UPS UPS flashes the On-Line and Overload LEDs alternately, it is signifying that the unit is in "Sleep" mode after the optional shutdown software has gracefully shutdown the operating system. In this state the unit turns off its output power to conserve the battery as the unit waits for normal input power to return.

What happens if a ups fails a battery test?

If it fails the test, the red Replace Battery indicator will be lit as well as the green On Line LED. If the UPS fails the test and the unit is still in warranty (3 years from date of purchase), contact APC's Technical Support for further troubleshooting.

What if my ups battery is out of warranty?

If the unit is out of warranty, a replacement battery should be ordered from local retailers, APC, or the APC website ([http://www.apc.com](#)). This signifies an internal fault in the UPS please contact APC's Technical Support and have your model number and serial number ready.

Why does my ups run on battery?

Keep in mind that the UPS will run on battery whenever UPS deems the power is unsafe for your computer equipment. This indicator is lit whenever equipment connected to the Battery Backup outlets is drawing more power than the UPS can provide. This symptom is also accompanied by a shrill constant tone.

When the Overload/Check Battery LED is illuminated solid red (not flashing), the output capacity of the battery-backup/ surge-protected outlets on the UPS has been exceeded.

Also, include the exact part number and serial number found on the bottom of the Back-UPS RS/XS. If the Back-UPS product is outside of the factory warranty, use the UPS Replacement ...

If the Self-Test passes, the green On-Line LED will go on solid while the yellow On Battery LED will go off.

SOLAR PRO.

**Backup ups rs 1500 on battery solid
yellow light**

Web: <https://www.lacuttergroup.es>